

SIMU



Hz02 Quick Reference Guide

Tubular operators with integrated radio and manual override for blinds, awnings & roller shutters


This device complies with part 15 of the FCC Rules. Operating is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Hz02 Ref Guide

Read all instructions carefully before use.

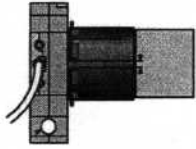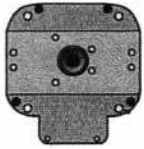


DMI Override Motor

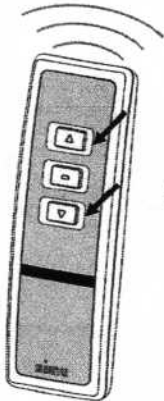


STEP 1
Wake the motor by pressing the **UP** and **DOWN** buttons simultaneously until the motor jogs


Note: After every command the motor will jog to confirm

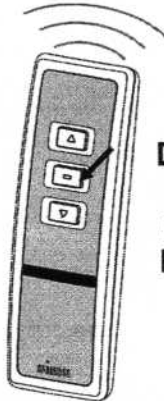

STEP 2
Check the direction of rotation with the **UP** or **DOWN** button. If needed, change the direction of rotation by pressing and holding the **STOP** button until the motor jogs.

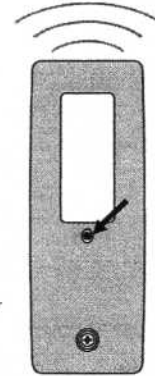


STEP 3
Press and hold the **PROGRAM** button on the back of the transmitter until the motor jogs. The buttons no longer have to be held for the motor to run. Double check the limits are in the desired position

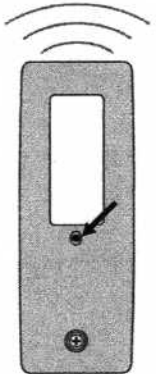


To add or delete a remote/channel press the **PROGRAMMING** button on the back of an already programmed remote until the motor jogs. Next press the **PROGRAMMING** button on the back of the remote you wish to add or delete until the motor jogs.

To reset the motor to factory mode start with the motor connected to power. Cut power for 8 seconds, reconnect power for 8 seconds, cut power for 8 seconds and then reconnect power. The motor should start to run (if this does not happen repeat the 8 second power cuts until the motor does run). Allow the motor to stop on its own (do not press stop, up or down or you will have to repeat the double power cut) Once the motor stops on its own, press and hold the **PROGRAMMING** button for over 8 seconds. The motor may jog twice.

Wall Switch Transmitter

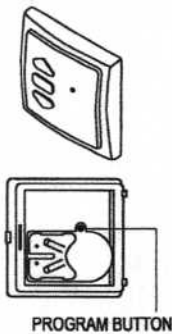


Decorator Wall switch

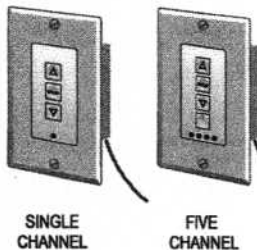

SINGLE CHANNEL


FIVE CHANNEL

Side of Transmitter

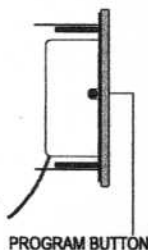

PROGRAM BUTTON

Handheld Transmitter

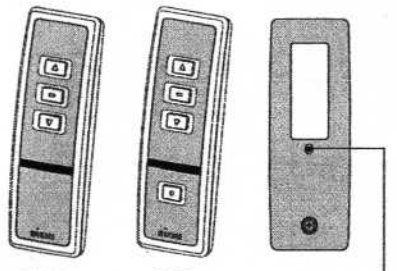


SINGLE CHANNEL

FIVE CHANNEL

PROGRAM BUTTON

Hz Timer

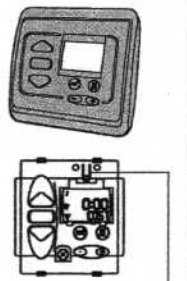

PROGRAM BUTTON